


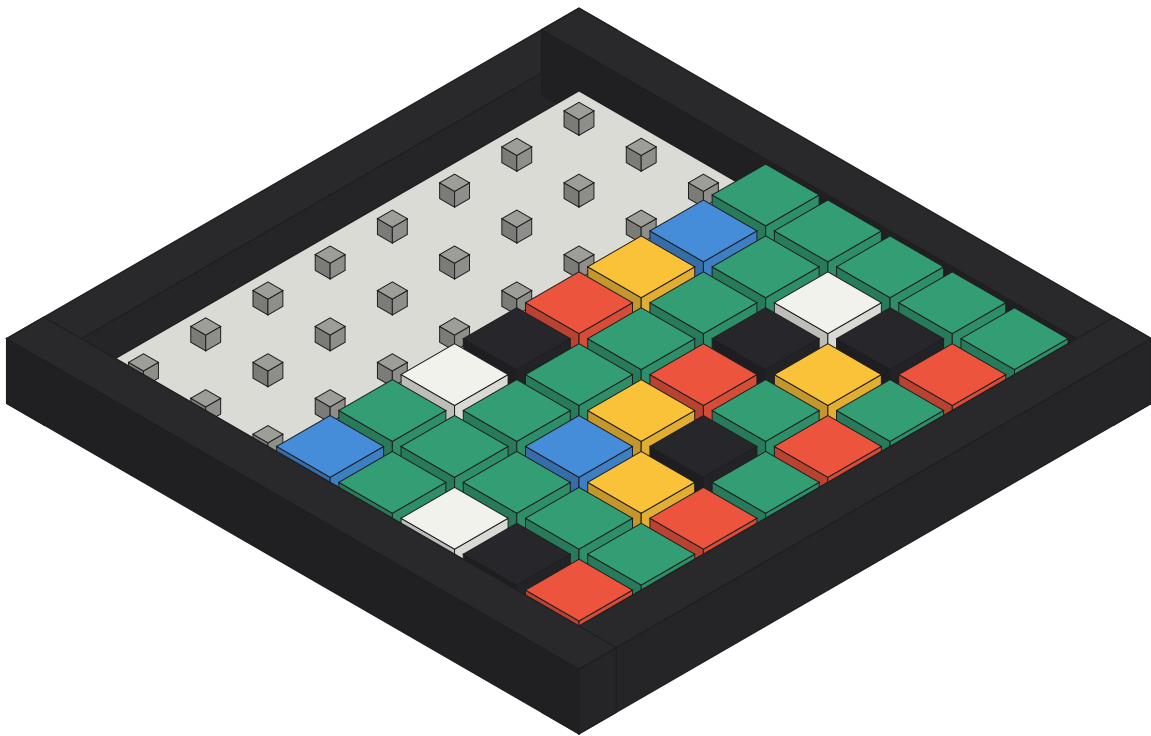

Assemble your frame

Tool-free snap corners · base plate pre-fitted · about 10 minutes


Works for every BLOCK LAB frame: Desk 16 × 16, Studio 24 × 24, Long 40 × 12 and Grand 40 × 30, in Gallery White, Matte Black and Classic Gilt.

Assemble your frame

Tool-free: the base plate is already fitted. About 10 minutes.


1 Check the contents

Inside the box: the base plate with the key stems already fitted, 4 frame sides (2 long, 2 short on Long and Grand frames), 4 snap corners, your keycaps in bags sorted by colour code, a key puller, this guide and a wall cleat with screws or a desk stand. If anything is missing, email us before you start.

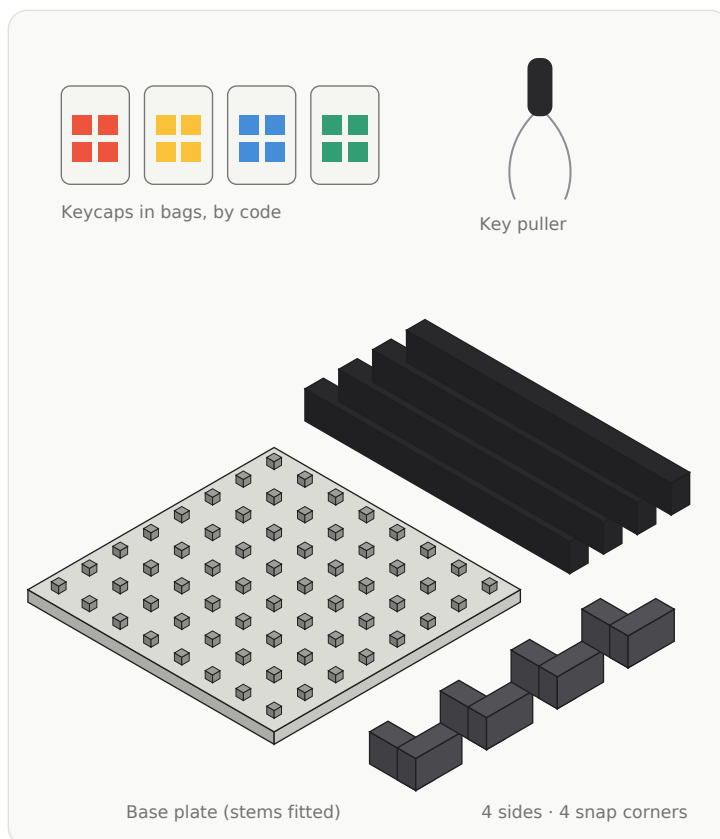

2 Lay the base plate face up

Put a soft cloth or the box lid on a clear table and place the base plate on it, stems facing up. The arrow and the word TOP on the back of the plate must point away from you.

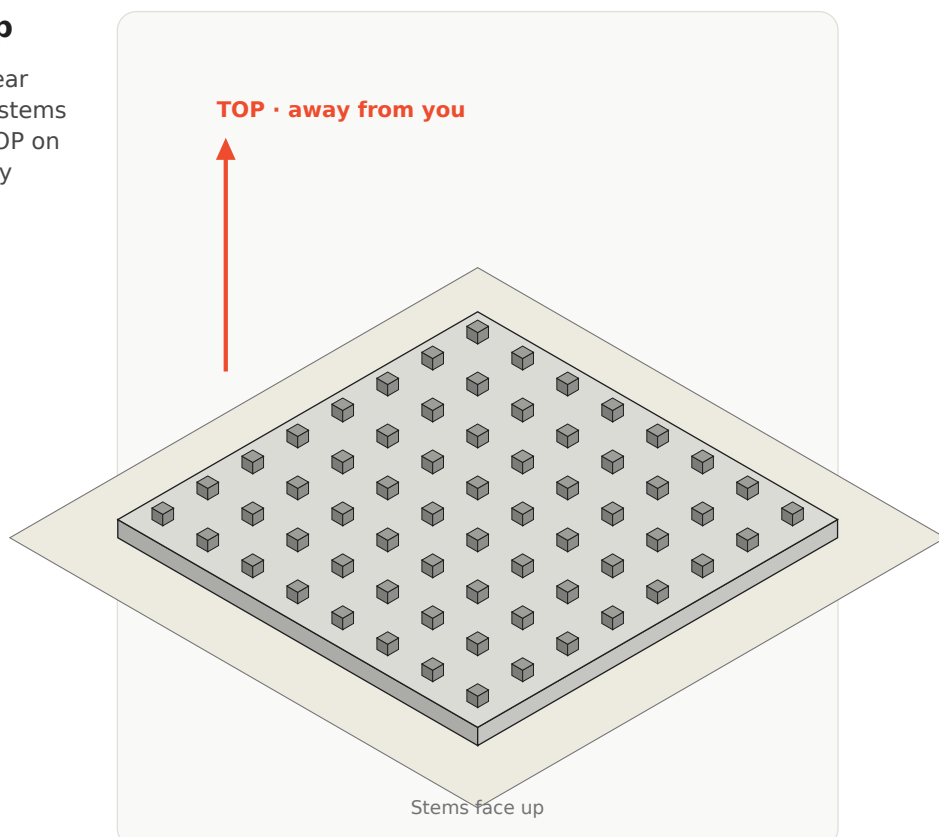


Assemble your frame (continued)

Tool-free: the base plate is already fitted. About 10 minutes.


3 Click the four sides onto the plate

Each side has a groove along its inner edge. Hold a side level, slide the groove over the edge of the plate and press until it sits flat on the table. Start with the top side, then the bottom, then left and right. The sides are marked T, B, L and R on the inside.

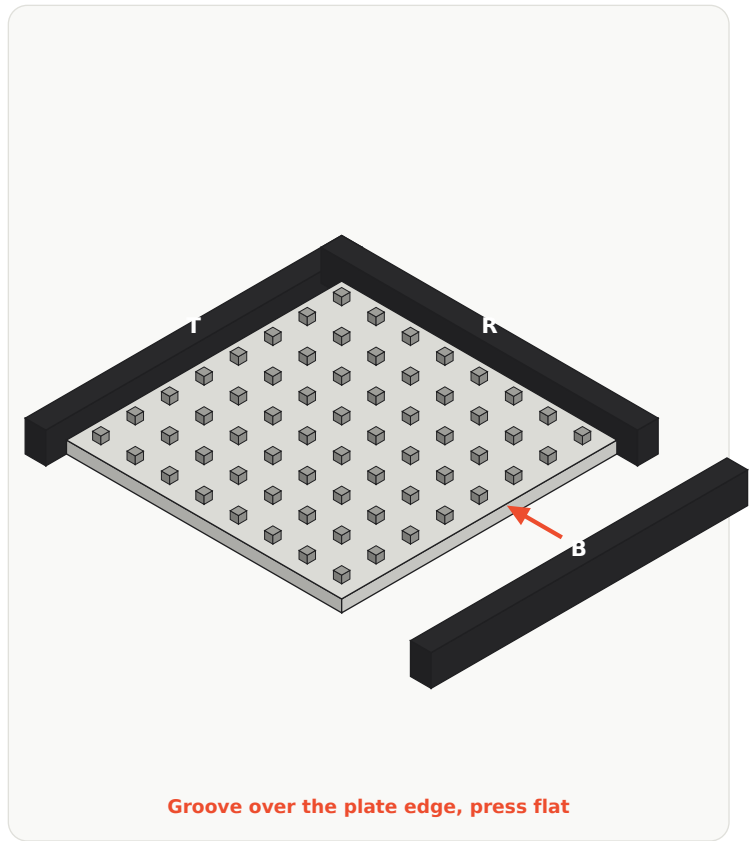

4 Snap the corners in until flush

Push a snap corner into the two open ends at each corner. Press firmly with your thumb until you hear and feel a click. Run a finger over the joint: it should be smooth with no gap. No tools, no glue.

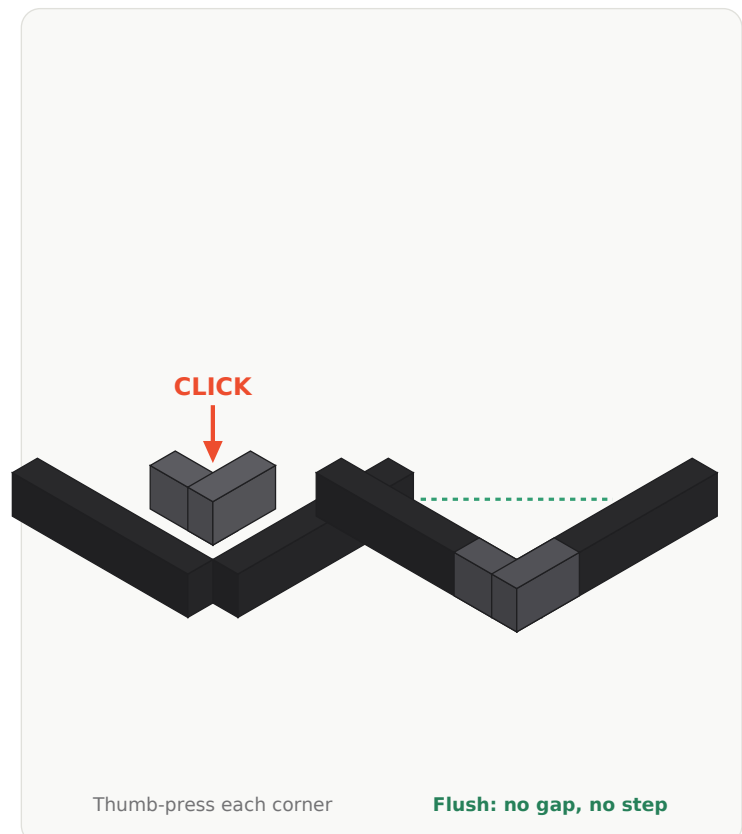


Assemble your frame (continued)

Tool-free: the base plate is already fitted. About 10 minutes.


5 Fit the wall cleat or the desk stand

Wall: screw the slim cleat to the wall with the arrow up (use a level and the plugs for plaster or brick); the matching rail is already on the back of the frame. Desk (16 × 16): fold out the stand on the back until it locks.

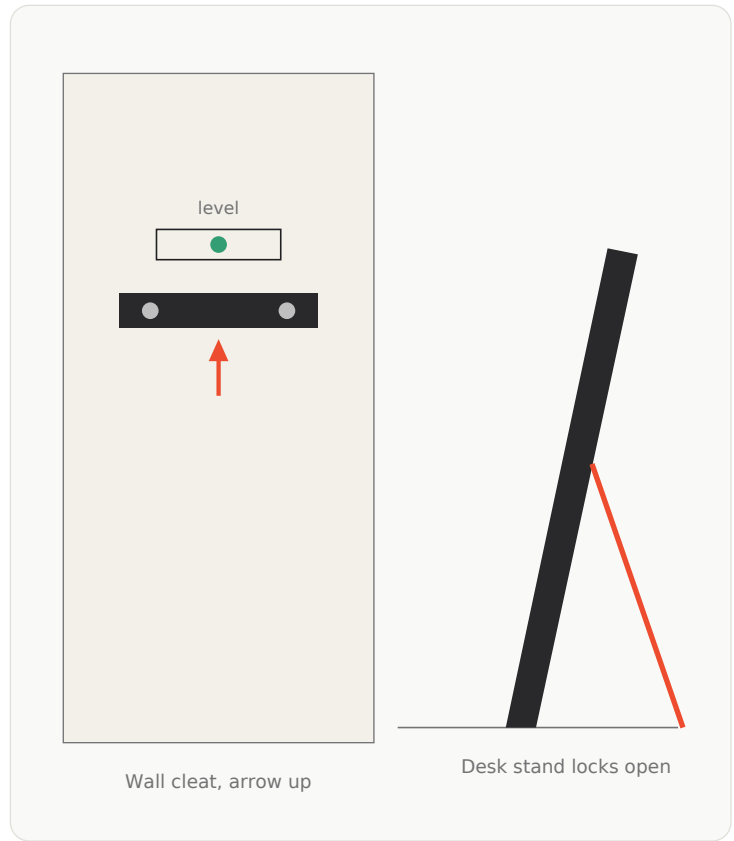

6 Place your keys

Now follow the chart pages of this guide. Start at section A1, fill one row at a time and press each keycap straight down until it clicks. Building it flat on the table is easiest; you can also hang it first and build on the wall.

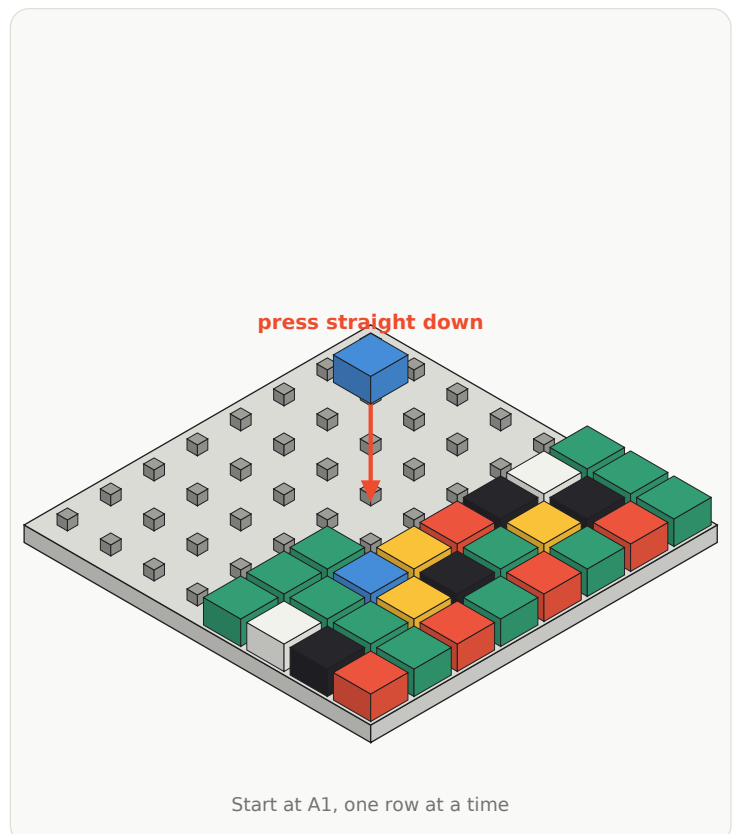


Assemble your frame (continued)

Tool-free: the base plate is already fitted. About 10 minutes.


7 Hang it

Lift the frame with both hands by the sides (not by the keys), lower the rail on the back onto the wall cleat and let it slide down until it seats. Check it is level and keep it out of strong direct sunlight.

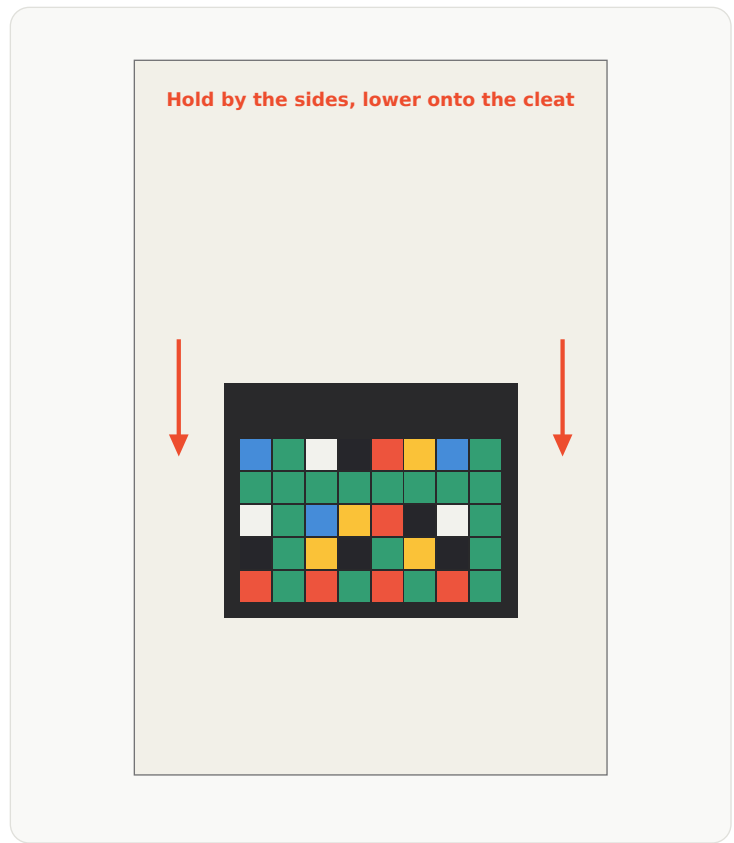

8 Swap keys with the puller

To fix a key or change the art, slip the two wire loops of the key puller over the keycap, squeeze gently and pull straight up. Never lever a keycap sideways with a knife or screwdriver: that can bend the stem.

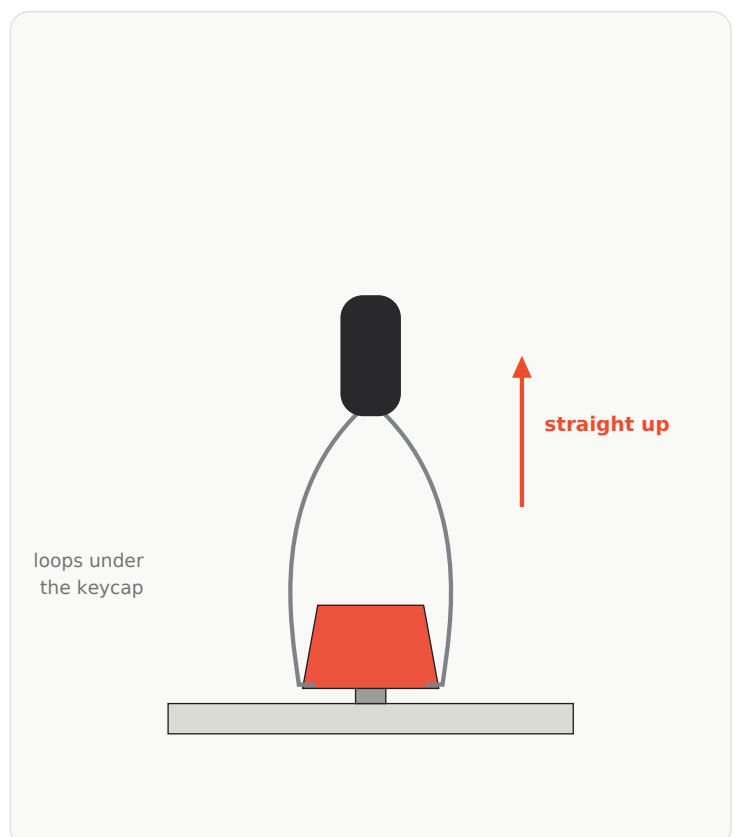

Assemble your frame (continued)

Tool-free: the base plate is already fitted. About 10 minutes.

9 Care


Dust with a soft dry brush or a microfibre cloth. Do not use water, sprays or solvents on the frame or plate. Avoid hanging it above a radiator or in a bathroom. Keep your spare keycaps: they fit every BLOCK LAB Art Pack.



Soft dry brush



No water or sprays

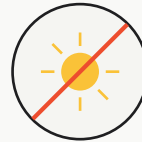


No strong sun



Not over heaters

10 Taking it apart

Lay it face down on a cloth. Press the small release tab on the back of each snap corner and pull the corner out; the sides then lift off the plate. Pack everything back in the box to move house or to store it.

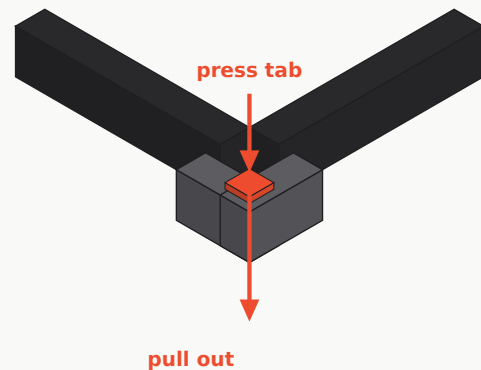

Back of the frame, face down on a cloth